

# DC20D MKII configuration and instructions

Ver1.0

## 1. Panel and display



## 2. Keys description

KEYS	NAME	Main Function
	Stop Reset Revert	<ul style="list-style-type: none"> <li>◆ Can stop generator under manual/auto mode;</li> <li>◆ Can reset shutdown alarm</li> <li>◆ During stop procession, pressing this key again can stop generator immediately.</li> <li>◆ Pressing this key can cancel the setting and back to upper class under edition.</li> <li>◆ Parameters to be saved under value checking page.</li> </ul>
	Manual	<ul style="list-style-type: none"> <li>◆ Pressing this key will set the module into manual mode.</li> <li>◆ Under display mode, parts of the page can move down.</li> <li>◆ Under edition mode, to move the digit or decrease the numbers.</li> </ul>
	Auto	<ul style="list-style-type: none"> <li>◆ Pressing this key will set the module into auto mode.</li> <li>◆ Under display mode, parts of the page can move up.</li> <li>◆ Under edition mode, to move the digit or increase the numbers.</li> </ul>
	Page Change	<ul style="list-style-type: none"> <li>◆ Change the display page.</li> <li>◆ Under display mode, Confirm the change under edition mode.</li> </ul>

## 3. Parameter setting

### ◆ Enter the edition page

Please set the parameters according to below steps:

1) In the stop mode, please and simultaneously, then loose, Then system comes into menu setting.

2) Press to shift up the parameters, press to shift down the parameters, press to get into parameter changing page.

3) Press to add number, press to reduce number, press cancel. The value can be increased or decreased continuously when pressing the button continuously. Press to confirm the value modification.

4) Under display mode, press to exit and save data.



**Note: the data can not be saved if the user didn't press STOP to confirm the setting.**